



BRIKBIKES



Brikbikes assembly manual

Front wheel assembly

A - No front brake

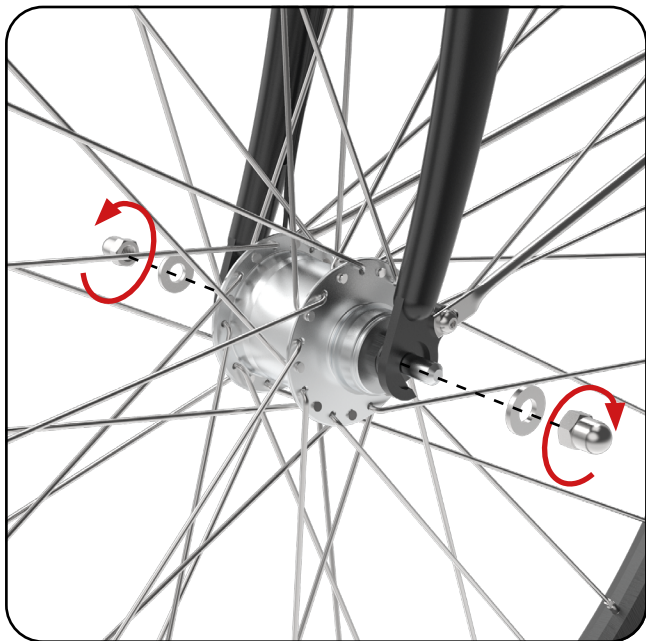

B - Disc brakes

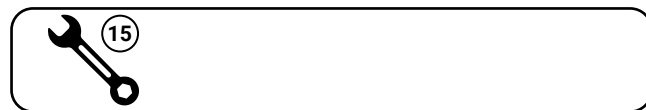
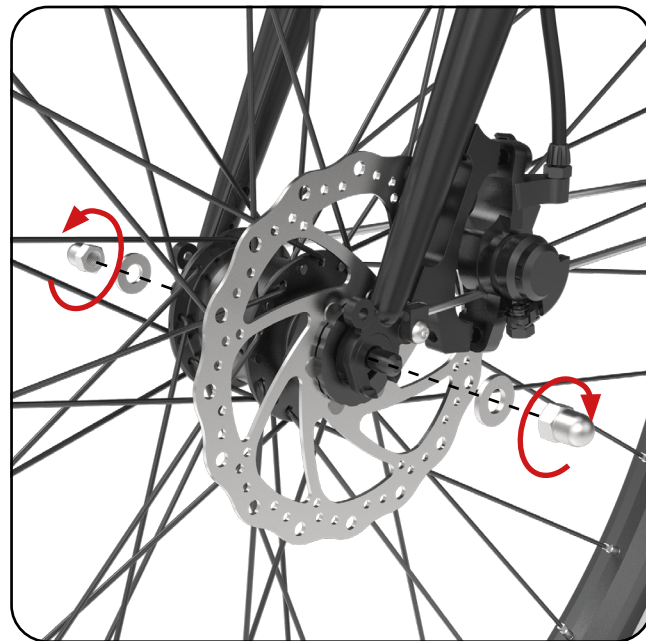


BRIKBIKES


Brikbikes assembly manual

Front wheel assembly


C - Rollerbrakes

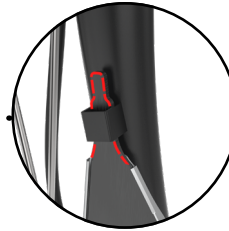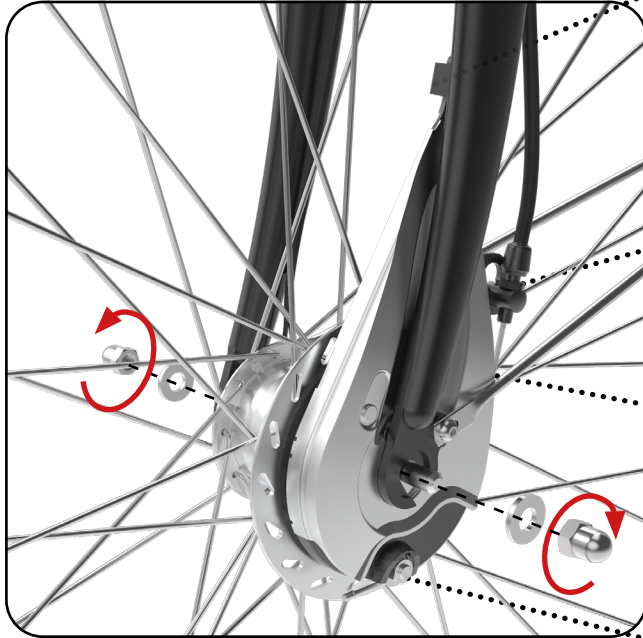


Position the rollerbrake so that the tip falls into the bracket of the fork.

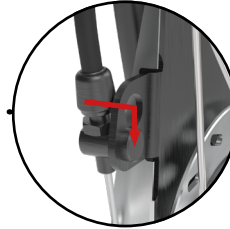

Insert the cable adjusting bolt from the side, and slide it downwards into the bracket.

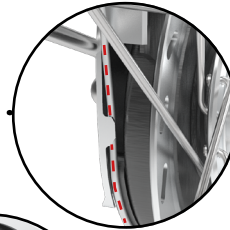

Clamp the cable behind the housing tab.

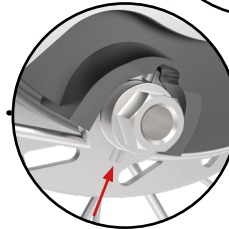

Use an 8 mm spanner to twist the cable nut, so its grooves align with the socket. Place the nut by moving it in the socket, using the spanner.